 
 


www.scotsman.co.za

 
0861777078

Scotsman EC Instalation

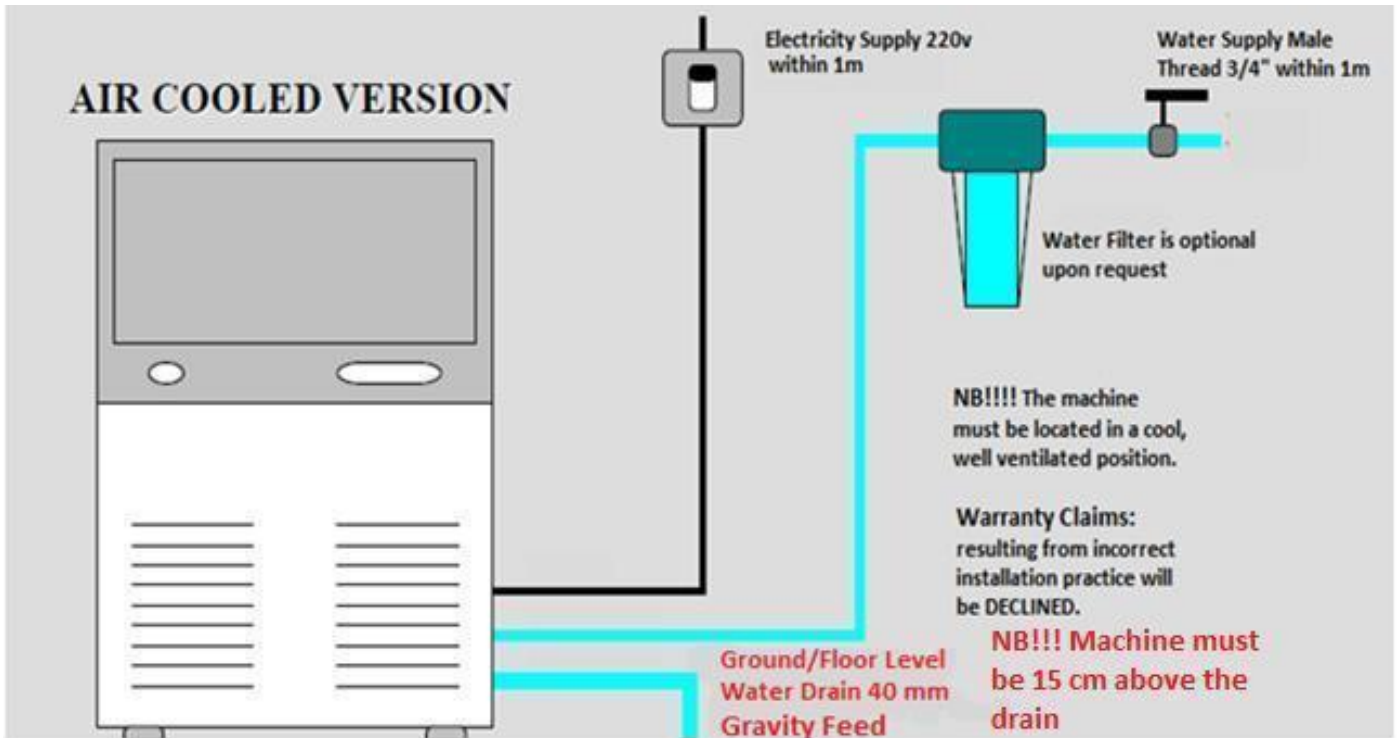


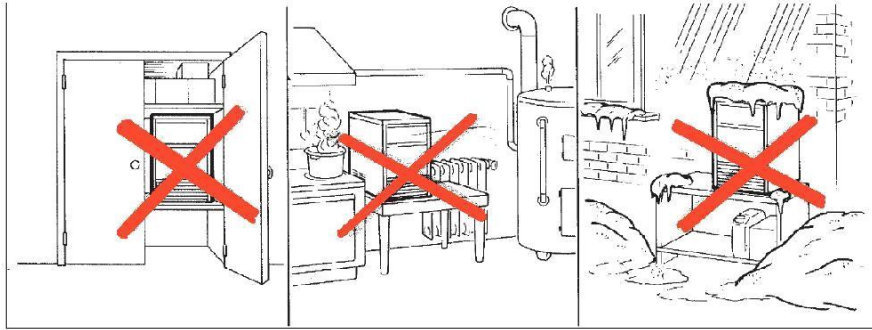

- ❖ Unbox the ice machine.
- ❖ Visually inspect the exterior of the machine to ensure no damage occurred during transit.
- ❖ Open the door and remove the water inlet pipe and water drain pipe.
- ❖ Remove the packaging tape that is securing the curtain and the spray assy.

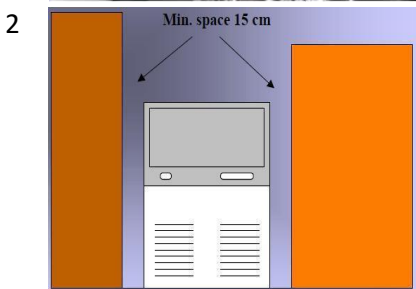

 - ❖ Check for the correct ambient conditions:
 - Min. ambient temperature 10°C
 - Max. ambient temperature 35°C
- ❖ Adequate space must be left for proper water and electrical connections on the rear side of the machine. A minimum clearance of 15 cm on both sides for best routing of air.

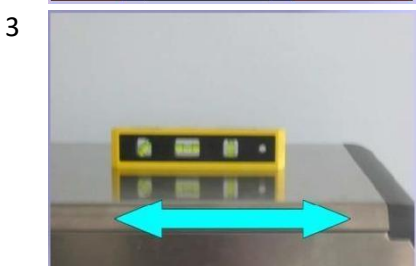

- ❖ Level the unit in both directions, front to rear and right to left side using the adjustable feet.



- ❖ Connect the water inlet hose provided with the ice machine to the water inlet valve situated on the back of the machine and connect the other end of the inlet hose to the water supply (3/4" male tread tap).
 - Min. water pressure 1 bar
 - Max. water pressure 4 bar
 - Min. water temperature 10°C (**Must be connected to cold water tap**)
 - Max. water temperature 30°C



- ❖ Connect the water drain flexible hose supplied with the machine to the water drain fitting situated on the back of the machine using the clamp. **NB!!!! Make sure the clamp is properly secured, in order to prevent leaking.**
- ❖ The other end of the flexible drain hose to go to **floor point** drain.
- ❖ **Machine must be at least 15 cm higher than the drain point.**

6



Install an adequate electrical plug according to the local standards and regulations.

7



Open the tap.

8



Switch on the power supply at the power point.